


LS-EZT-TOOL-ER INSTRUCTIONS (Unshielded)



1. Prepare the EZT Tool with ERI type Modular Jack

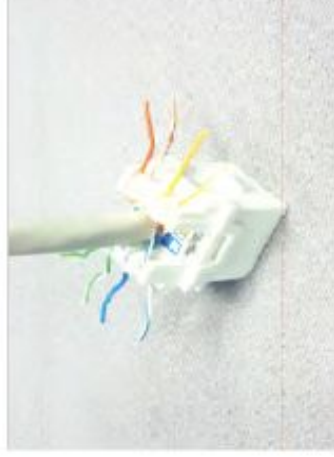

2. Place the wires into the wire slots according to the wire scheme.



3. Put the Modular Jack into the termination tool in the right position.



4. Squeeze the tool then terminate all wires and trim the excess wires at the same time.



5. Remove the Modular Jack vertically away from the termination tool.



6. Place the cap & use the cable-tie to fix the cable. - Completion -